


	Prewash		Wool
	Cotton		Drain
	Mixed Cotton/Synthetic		Eco Option
	Rapid		Rinse Hold Option
	Synthetic		Intensive Rinse Option
	Rinse		Cold
	Spin		On/Off button
	Delicate		

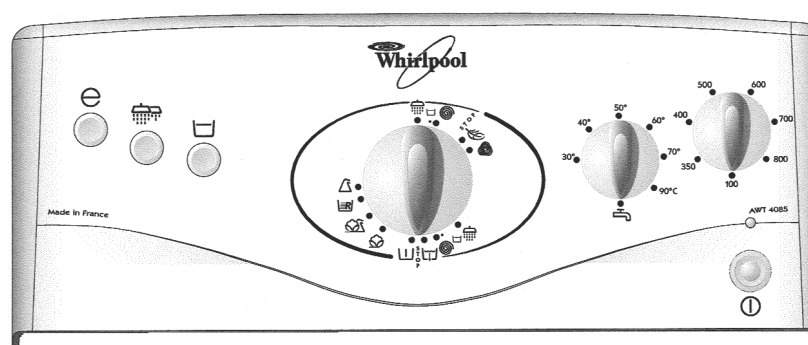

- 1) For improved garment care, spin speed is restricted.
- 2) Programme duration figures (guideline) are valid for maximum temperature wash with no special functions.

Programme		Type of fabrics / Degree of soiling / Notes	Max. Load kg	Detergent and Additives			Options			Temperature Selector °C	Maximum Technical Spin Speed rpm/min	Recommended Spin Speed rpm/min	Programme Duration approx. min 2)
				Pre-wash 	Wash 	Softener 	Eco 	Intensive Rinse 	Rinse Hold 				
	Cotton with prewash	Heavily soiled, hard wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc.). The max. load for heavily soiled laundry is 3.5 kg.	4.5	Yes	Yes	*	*	*	*	 to 90	800	800	130
	Cotton	Averagely soiled, hard wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc.).	4.5	Yes	Yes	*	*	*	*	 to 90	800	800	115
	Mixed Cotton/Synthetic	Lightly soiled textiles in cotton or linen blouses, shirts, dark coloured terry cloth, coloured linen articles, jeans, etc.	2.0	—	Yes	*	*	*	*	 to 60	800	500 to 800	100
	Rapid	Lightly soiled textiles in cotton or linen blouses, shirts, dark coloured terry cloth, coloured linen articles, jeans, etc.	4.5	—	Yes	—	—	*	*	 to 40	800	500 to 800	85
	Synthetic	Lightly or averagely soiled blouses, shirts, etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or cotton blends.	2.0	—	Yes	*	—	*	*	 to 60	800	500 to 800	70
	Rinse+Spin	Programme for treating wash with starch or softener. Terminates with an intensive spin cycle.	4.5	—	—	*	—	—	*		800	500 to 800	20
	Spin	Programme for intensive spin cycle.	4.5	—	—	—	—	—	—	—	800	500 to 800	10
	Delicate	Delicate curtains, dresses, shirts and blouses.	1.5	—	Yes	*	—	—	*	 to 40	700 ¹⁾	100 to 400	55
	Wool	Only machine washable woollens with pure new wool label. If you select the special function "Rinse Hold" do not leave garments to soak for too long.	1.0	—	Yes	*	—	—	*	 to 30	700 ¹⁾	100 to 400	45
	Rinse+Spin	Programme for treating wash with starch or softener. Terminates with a gentle spin cycle.	4.5	—	—	*	—	—	*		700 ¹⁾	100 to 400	15
	Spin	Programme for gentle spin cycle.	1.5	—	—	—	—	—	—	—	700 ¹⁾	100 to 400	5
	Drain	Drain only, without spin cycle. Alternative way of terminating programmes with "Rinse Hold" setting.	—	—	—	—	—	—	—	—	—	—	3

N.B. : The excess of detergent in the dispenser could cause technical problems.

CONSUMPTION DATA					
Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Programme Duration (min)
Cotton + Intensive Rinse	90	4.5	72	1.80	115
Cotton	60	4.5	63	1.03	115
Mixed + Intensive Rinse	60	2.0	66	0.80	100
Mixed	40	2.0	54	0.40	100
Rapid	40	2.5	49	0.50	85
Synthetic	30	1.5	45	0.30	70
Delicate	40	1.5	70	0.65	55
Wool	40	1.0	70	0.55	45

Prewash cycle increases programme duration by approx. 15 minutes. Consumption values were measured in normalized conditions in compliance with Standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.


ADDING DETERGENT AND ADDITIVES

Add the detergent and the additives into the dispenser as follows:

- Programmes with pre- and main wash
- Main wash programme without prewash
- Fabric softeners and conditioners
- Stain remover agents
- Anti-scale agents (water hardness 4)

Important:

- Be careful not to fill more than the “MAX” level mark.
- For programmes with prewash: do not use liquid detergents.
- For programmes without prewash from cold to 40° C it is recommended to use a liquid detergent to avoid whitish residues on the coloured laundry.

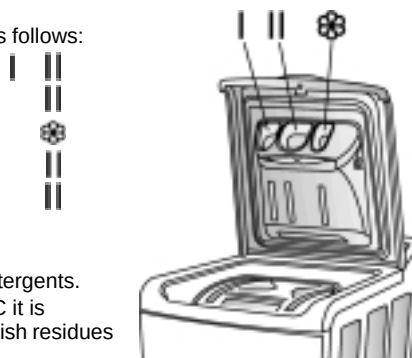

CLOSE THE DOOR AND SELECT THE PROGRAMME

1. Turn the **programme selector knob** clockwise to the desired programme.
2. Turn the **temperature knob** to the required temperature.
3. Turn the **spin speed selector** to the required setting.

PRESS ANY DESIRED SPECIAL OPTION BUTTON(S).

Eco button “”

- The wash time is extended and the water temperature is reduced.
- This function saves about 30% in energy without compromising the excellent results of the wash.

Intensive Rinse button “”

- The water level increases for improved rinsing efficiency.
- This option is particularly suitable for areas with very soft water when washing baby linen and helps people with allergies.

Rinse Hold button “”

- The laundry remains in the last rinse water without progressing to the spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programmes Synthetic “” or Delicate “”.
- This function is particularly useful if you want to postpone spinning to a later time or when you do not wish to spin the clothes.

Note: The programme selector knob stops on the position “”.

Terminate the programme:

- Press the Rinse Hold button again; the programme will terminate automatically with the spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme knob to the drain programme “” and push the On/Off button “”.

PROGRAMME START

Open the tap and press the On/Off button “”. The pilot lamp lights up.

DOOR LOCK

During the running programme the door cannot be opened. The door locks automatically in all programmes. If the programme is stopped or the electrical power supply is terminated, the door lock will open after approximately 1 minute.

PROGRAMME END

- The programme selector knob is at “Stop”.
1. Press the On/Off button “”.
 2. Cancel the special options by pressing the appropriate buttons.
 3. Turn the water supply tap off.
 4. Wait for the door to unlock (about 1 minute).
 5. Open the door and the drum flaps and unload the machine.

SELECTING A NEW PROGRAMME, SPIN SPEED, OPTIONS AFTER PROGRAMME START

1. Press the On/Off button “” to switch off the appliance.
2. Select the new programme, temperature, spin speed and options.
3. Press the On/Off button “” to switch on the appliance.

TO STOP, RESET A PROGRAMME BEFORE THE END

1. Press the On/Off button “” to switch off the appliance.
2. Set the programme selector to drain “”.
3. Press the On/Off button “” to start the drain programme.

Only open the door when the programme selector is at “Stop” and the door is unlocked (after approximately 1 minute).